

ASSEMBLY INSTRUCTIONS

ITEM CODE : IN148

ITEM DESCRIPTION : 4 DRAWER BEDSIDE



1

Reverse the bedside & place the leg as shown & align the leg to match the apron.




2

Insert the Bolt to fix the leg with the unit top and tighten the nut with the washer as shown in fig1



3

Fix the other leg in the similar way

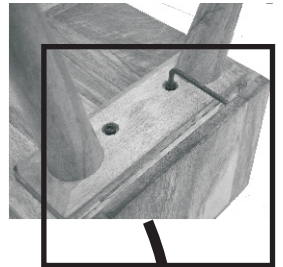

4

Reverse the bedside straight. Now your bedside is ready for use



Fig. 1

