

# ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 1797

ITEM DESCRIPTION: 1 DOOR BEDSIDE



1

Reverse the unit & place the leg as shown & align the leg to match the apron.




Insert the Bolt to fix the leg with the unit top and tighten the nut with the washer as shown in fig1

2



3

Fix the other leg in the similar way

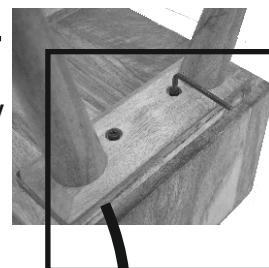

Reverse the unit straight. Now your Bedside is ready for use.

4



Fig. 1

